

The microfluidic biosensor and the compact analyser from pes diagnosesysteme GmbH enable blood to be analysed without extensive laboratory equipment.



## Built-in Microfluidics

At the heart of the LPKF LQ-Vario MF lies a precise fibre laser for creating ultra-fine welding seams lines in the micrometer range – perfect for microfluidics applications. Other advantages include:

- System and processes are clean-room compatible.
- Process tracking & tracing is carried out during production.
- The LPKF LQ-Vario MF is capable of modular expansion and can be fitted with additional options.

### Technical Data: LPKF LQ-Vario MF

<b>Laser safety class</b>	1
<b>Laser power</b>	5 W / 10 W / 20 W / 50 W
<b>Laser wavelength</b>	1,070 nm – 2,100 nm
<b>Maximum scanfield</b>	210 mm x 210 mm (8" x 8"), optional 110 mm x 110 mm (4" x 4")
<b>Voltage</b>	400 V – 3 Ph/N/PE, 16 A, max. 3 kW
<b>Air supply</b>	6 bar
<b>Ambient conditions</b>	Max. operating temperature: up to 40 °C (104 °F) Max. humidity: up to 80 % at 25 °C (77 °F)
<b>Cooling system</b>	Integrated water/air recooling unit
<b>Options</b>	<ul style="list-style-type: none"> <li>• Clamping module</li> <li>• Rotary indexing table</li> <li>• Dual clamping device</li> <li>• Remote maintenance</li> <li>• Automatic clamping tension control unit</li> <li>• Data acquisition computer including additional software (ProSeT, ProCaT etc.)</li> <li>• Pyrometer for process monitoring, optionally also for process control</li> <li>• Equipment package "Radial welding"</li> </ul>
<b>Machine dimensions (W x H x D)</b>	900 mm x 2,000 mm x 1,000 mm (35" x 79" x 39")
<b>Machine weight</b>	500 kg (1,102 pounds)

#### LPKF Laser & Electronics AG


##### Laser Welding Division

Gundstraße 15 91056 Erlangen Germany

Phone +49 (0) 9131 61657-0 Fax +49 (9131) 61657-77

info.laserwelding@lpkf.com

www.lpkf-laserwelding.com

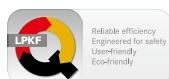

## Laser Plastic Welding in Microfluidics Applications LPKF LQ-Vario MF




LPKF AG, 125746-300911-EN

www.lenko-sternberg.de



## LPKF LQ-Vario MF

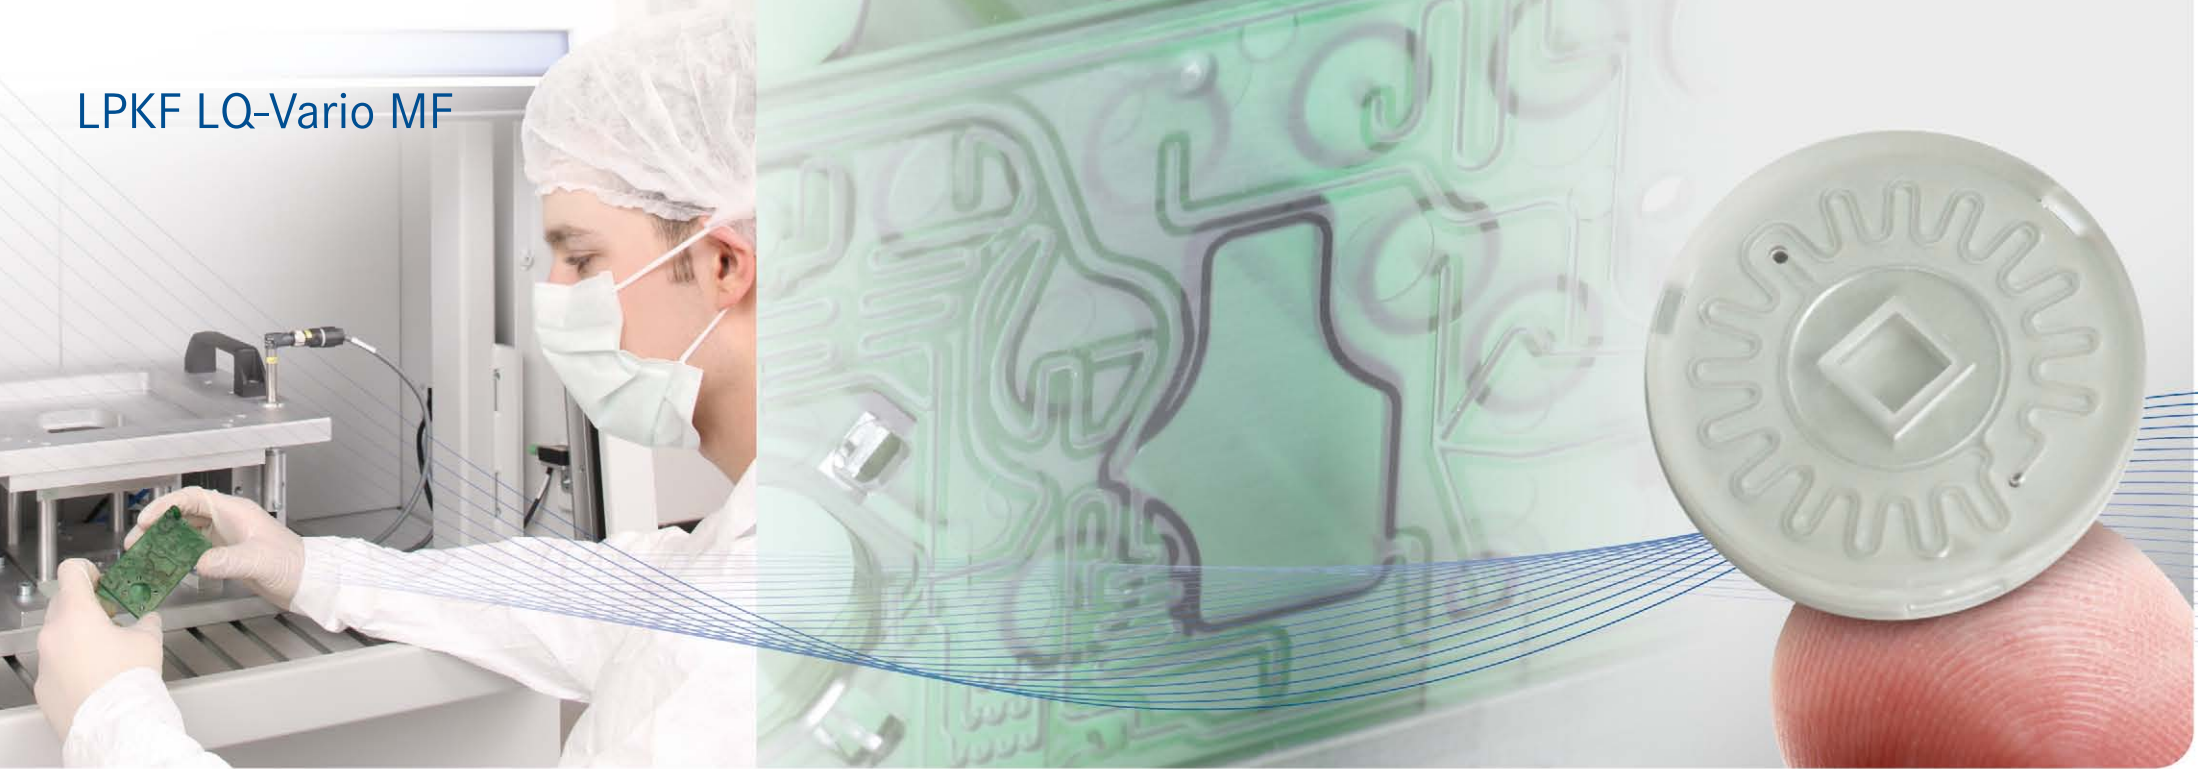

### Micrometer Precise Welds

Microfluidic components tolerate no errors. These devices require a strong hermetic seal with no particulates or additives allowed to contaminate the intricate network of channels.

Precise welding geometries are a precondition for this innovative technology – this accuracy is essential for achieving reliable results in microfluidics. Laser plastic welding is ideal here for many reasons.

### Two-Meter-Long Welded Seam

Using LPKF welding technology, a two-meter long welded seam was produced on a cartridge barely the size of a cellphone. During the welding process, the LQ-Vario MF monitors the whole procedure and records the parameters for seamless tracking & tracing.

No other sector demands such a high level of processing safety as the medical technology industry. Laser plastic welding has successfully proved its suitability for medical products in the highest risk category: Risk Class III (e.g. intracardiac catheters).

### Laser System and Know-how

Laser plastic welding creates precisely welded seams in any pattern without harming the surrounding material. The integrity of the fine channel cross-sections is not affected. The laser also has built-in flexibility: if the weld contours must be modified, this can be simply done by loading the new layout data. Changing from one product to the next requires minimal time and effort.

LPKF has a great deal of in-depth experience in the laser welding of medical products. A specialized application center in Erlangen supports interested parties with answers to construction questions, and process design assistance.